

# ■ Solenoid Controlled Relief Valves (SUB-PLATED Type)

電磁式調壓閥(座墊式)



SBSG-03  
SBSG-06  
SBSG-10

## ● 性能表 SPECIFICATION

型式 MODEL		壓力調整範圍 PRESSURE ADJ. RANGE (kgf/cm <sup>2</sup> )	最高使用壓力 MAX. OPERATING PRESSURE (Kgf/cm <sup>2</sup> )	最大流量 MAX. FLOW ℓ/min	重量 WEIGHT (kg)	
座墊型 SUB-PLATE TYPE	配管型 THREAD TYPE					
SRV-03G-2P		B:7-70 C:35-140 H:70-210	250	100	7.7	
SRV-03G-3P				100	8.3	
SRV-06G-2P	SRV-06T-2P			200	9	6.5
SRV-06G-3P	SRV-06T-3P			200	9	7
SRV-10G-2P	SRV-10T-2P			400	13.7	13
SRV-10G-3P	SRV-10T-3P			400	13.7	13
SRV-03G	SRV-04T			100	5.5	4.7
SRV-06G	SRV-06T			200	6.8	4.3
SRV-10G	SRV-10T			400	11	7
SBSG-03				100	4.7	
SBSG-06				200	5.7	
SBSG-10				400	11.5	

型式 MODEL	JIS 液壓圖形符號 GRAPHICAL SYMBOL	使用電磁換向閥型號 USE SOLENOID OPERATED DIRECTIONAL CONTROL VALVES	電磁鐵通電和卸荷口連接的關係 FUNCTIONS OF COIL & VENTINGS		
			電磁鐵A COIL A	電磁鐵A COIL A	卸荷口連接 OPTIONAL VENTING CONDITIONS
2B3A		AHD-02-2B3A	—	OFF	連到A孔 A PORT
				ON	連到油箱(無負載) TANK (UNLOADING)
2B3B		AHD-02-2B3B	—	OFF	連到油箱(無負載) TANK (UNLOADING)
				ON	連到B孔 B PORT
2B2B		AHD-02-2B2B	—	OFF	關閉狀態 (溢流閥設定壓力) PRESSURE FOLLOWING RELIEF
				ON	連到B孔 B PORT
2B2		AHD-02-2B2	—	OFF	連到A孔 A PORT
				ON	連到B孔 B PORT
3C2		AHD-02-2C2	OFF	OFF	連到油箱(無負載) TANK (UNLOADING)
			ON	ON	連到A孔 A PORT
			OFF	OFF	連到B孔 B PORT
3C3		AHD-02-3C3	OFF	OFF	連到油箱(無負載) TANK (UNLOADING)
			ON	ON	連到A孔 A PORT
			OFF	OFF	連到B孔 B PORT